




LG Motion 4G MS770 Speaker Replacement

This guide will show you how to replace the speaker in your phone.

Written By: Daniela Allbright

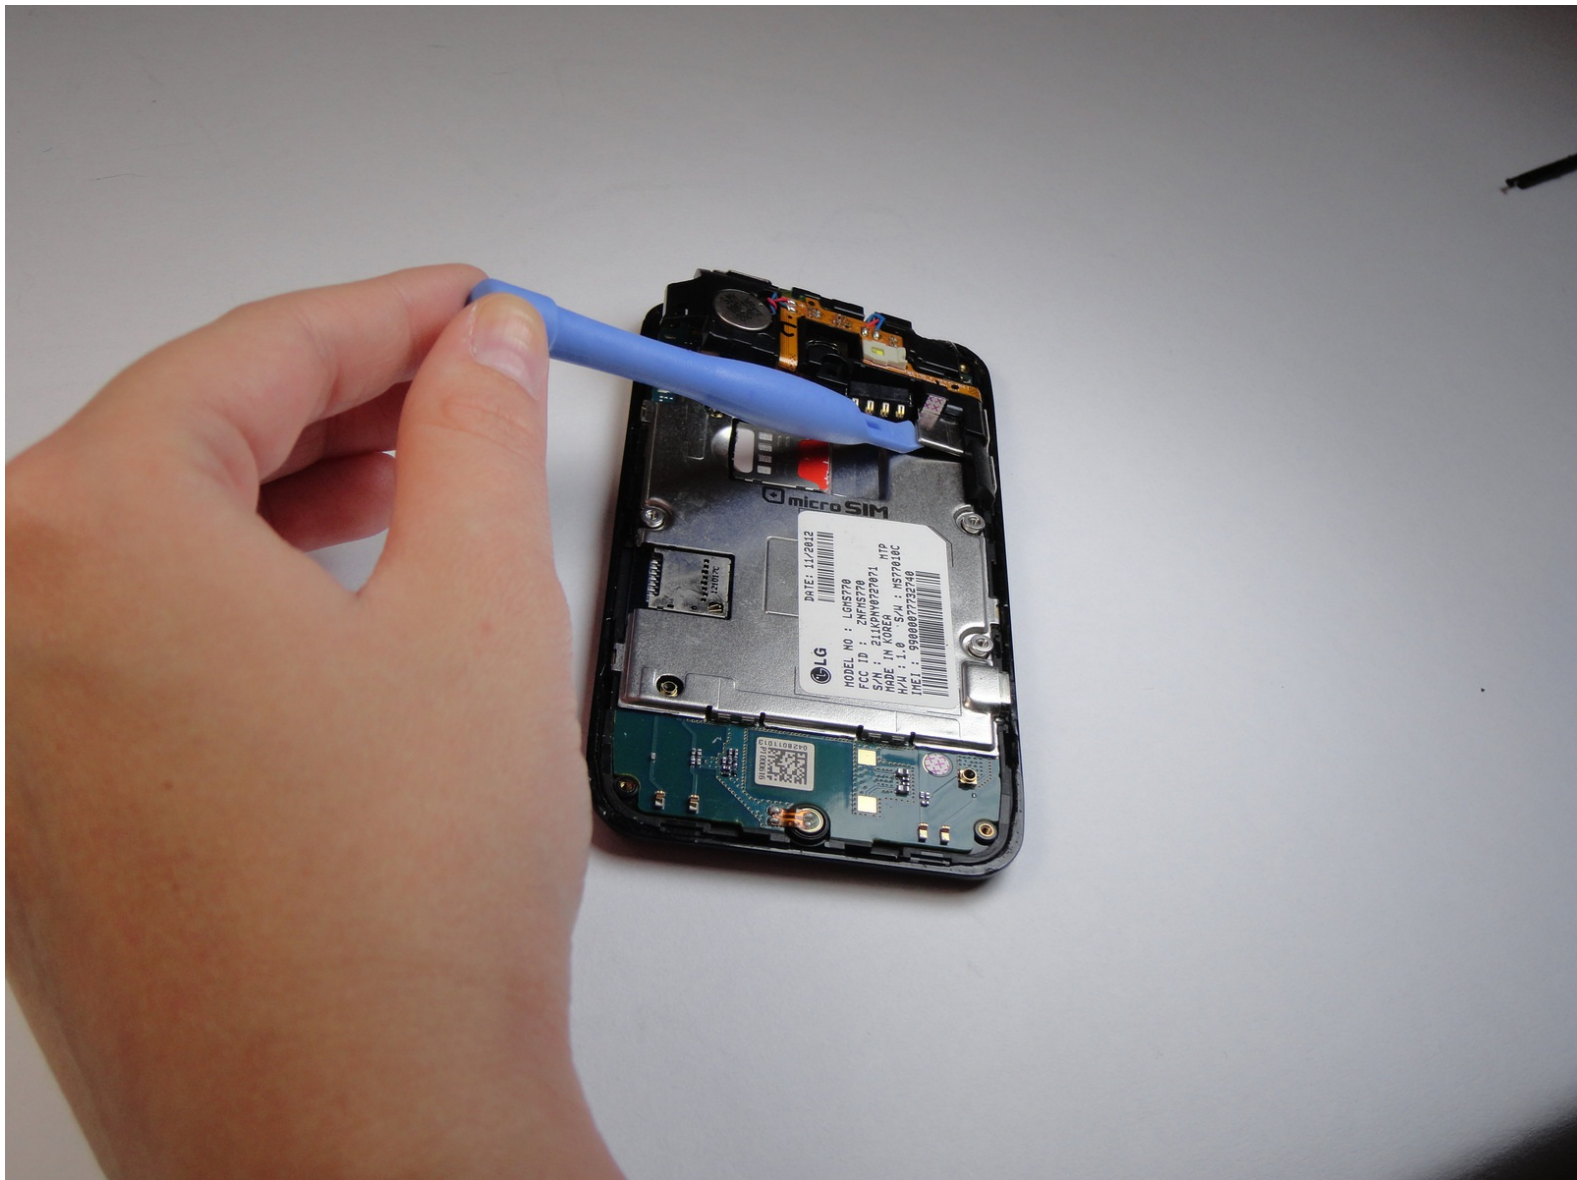

INTRODUCTION

If the speaker is blown or no sound is coming out this will show you how to replace a broken speaker.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remove the phone's back cover.



- Use a plastic opening tool to remove the back cover.

Step 2 — Remove the battery.



- Use a plastic opening tool to remove the battery, lifting from the bottom right corner.

Step 3 — Remove screws.




- Use a Phillips #00 Screwdriver to remove all eight 4mm screws.

Step 4





- Use a plastic opening tool to remove the back trim by working around all of the edges.

Step 5

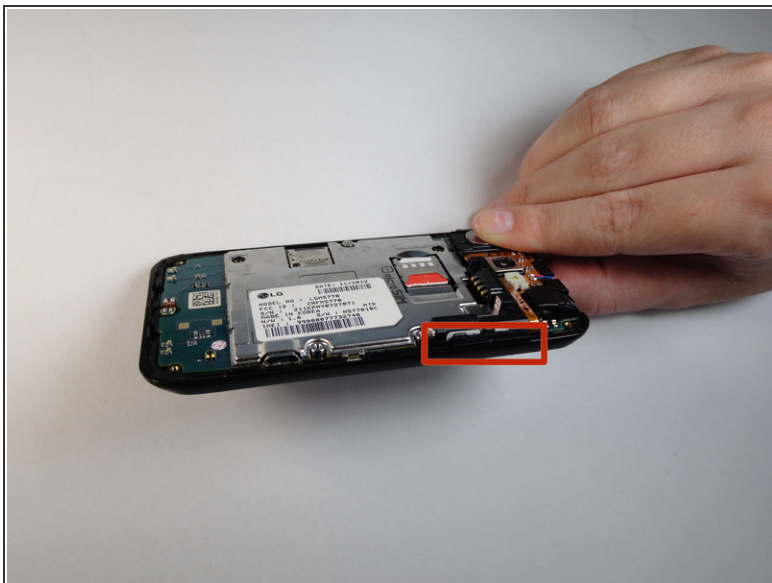

- Remove the volume buttons from the side.

Step 6 — Speaker

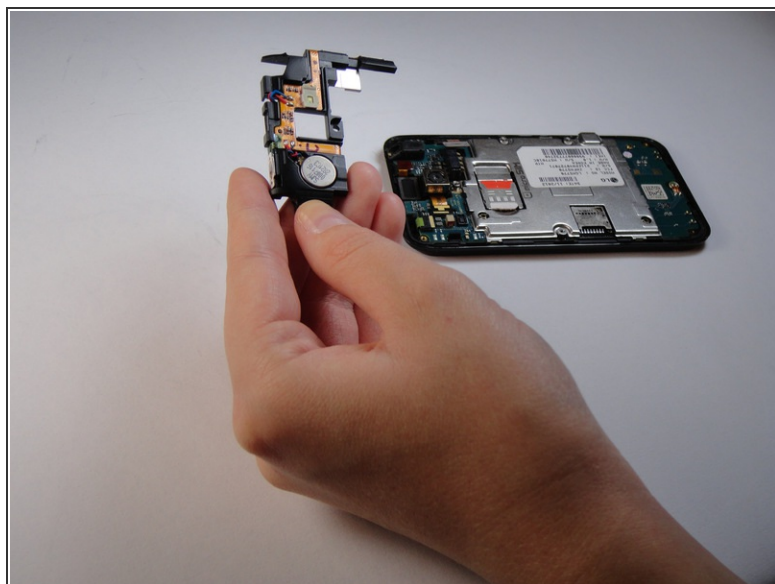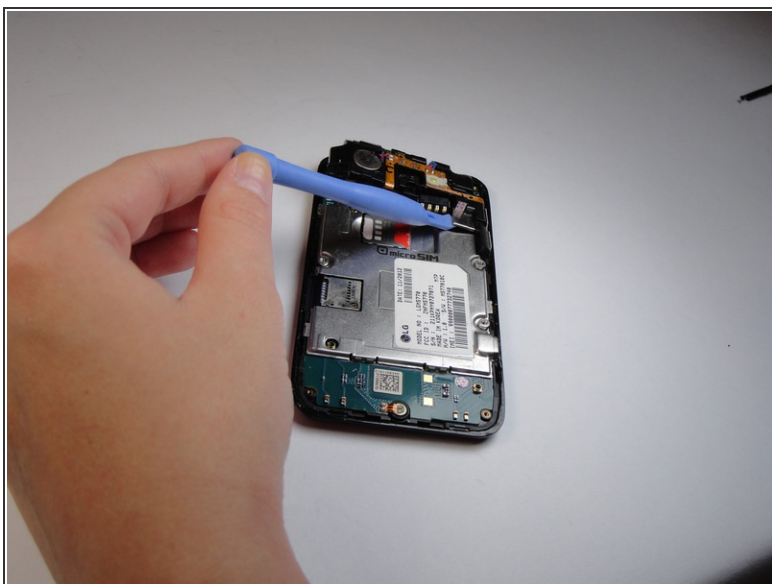

- Use a plastic opening tool to lift the speaker off by prying under the silver square as shown.

i Note: There is a small tab underneath the speaker that will be lifted off when the speaker is removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 03:53:41 PM.